

Jeep[®]

WRANGLER

2009
QUICK
REFERENCE
GUIDE



VEHICLE FEATURE

FUEL CAP:



LOOSE GAS CAP MESSAGE

- If the “gASCAP” message appears in the odometer display, tighten the gas cap until a “clicking” sound is heard.
- If the message continues to appear for more than three days after tightening the gas cap, see your dealer.

TIRE PRESSURE MONITORING SYSTEM (TPMS):



- A Tire Pressure Monitoring Light and a “low tire” message will display in your instrument cluster along with an audible chime if one or more of your vehicle’s four road tires are significantly under-inflated.
- Check the inflation pressure of each tire and inflate to the recommended pressure for your vehicle. The tire pressures recommended for your vehicle are found on the “Tire and Loading Information” label located on the driver’s side door opening. The TPMS light should not be used as a tire pressure gauge when adjusting your tire pressure.
- It is recommended that you check the tire pressure in the morning when tires are cool; inflate each tire to the recommended pressure for your vehicle. The light will turn off after your vehicle’s tire pressures are properly inflated and the pressure has been recognized. The vehicle may need to be driven for up to 20 minutes above 15 mph (25 km/h) before the light will turn off.
- **Temperature changes can affect tire pressure, causing the TPMS light to turn on.** Tire pressures will also increase as the vehicle is driven - this is normal and you should not adjust for this increased pressure.
- Driving on under-inflated tires reduces your vehicle’s fuel efficiency and tire tread life. If a spare tire is in use on the vehicle, the TPMS light may turn on. Refer to your Owner’s Manual.


OIL CHANGE INDICATOR:

MESSAGE

- A “CHAngE OIL” message will display and a single chime will sound when it is time for your next required oil change.

RESETTING LIGHT AFTER SERVICING

- Turn the ignition switch to the ON/RUN position (do not start engine).
- Fully depress the accelerator pedal three times within 10 seconds.
- Turn the ignition switch to the OFF/LOCK position.

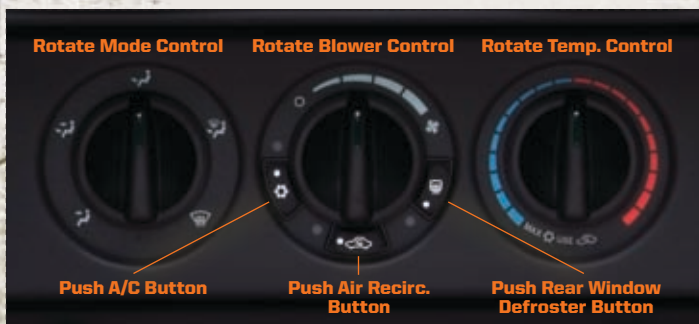

CLIMATE CONTROLS:

AIR RECIRCULATION

- Use recirculation for MAX A/C operation.
- For window defogging, turn the recirculation button off.
- Recirculation is not allowed in defrost, floor, defrost/floor (mix) modes.

HILL START ASSIST (HSA):

- The HSA system assists the driver when starting a vehicle from a stop on a hill. Activation of the system is automatic.
- Refer to your Owner's Manual for Hill Start Assist operation.

WIND BUFFETING:

- Wind buffeting can be described as a helicopter-type percussion sound. If buffeting occurs with the rear windows open, adjust the front and rear windows together.

POWER DOOR LOCKS:

- The door lock switch is located on each front door panel. Press the switch downward to lock and upward to unlock the doors.



DRIVER'S SEAT ADJUSTMENT:

FORWARD/REARWARD

- Lift up on the adjusting bar located at the front of the seat near the floor and release at the desired position.

HEIGHT ADJUSTMENT

- Ratchet the front lever, located on the outboard side of the seat, upward to raise the seat height. Ratchet the lever downward to lower the seat height.

RECLINER

- Lift the rear lever located on the outboard side of the seat, lean back and release at the desired position.



DRIVER'S AND PASSENGER SEAT (2-DOOR) REAR SEAT ACCESS:

- Push the lever on the seatback rearward to tilt the entire seat forward.

CLOCK SETTING:

(NON-TOUCH-SCREEN RADIOS)

- Press and hold the TIME button until the hours blink; turn the TUNE/SCROLL control knob to set the hours.
- Press the TUNE/SCROLL control knob until the minutes begin to blink; turn the TUNE/SCROLL control knob to set the minutes.
- Press the TUNE/SCROLL control knob to save the time change.

(TOUCH-SCREEN RADIO)

- Turn the radio ON.
- Touch the screen where the time is displayed.
- Touch the screen where "User Clock" is displayed.
- To adjust the hours, touch either the hour forward button or the hour backward button.
- To adjust the minutes, touch either the minute forward button or the minute backward button.
- To save the new time setting, touch the screen where the word "Save" is displayed.

INSTRUMENT

**TURN SIGNAL/
LIGHTS LEVER**

**COMPASS/
MINI-TRIP
COMPUTER**

**INSTRUMENT
CLUSTER**

**SPEED
CONTROL
LEVER**

**WIPER/
WASHER
LEVER**



PANEL

CLIMATE CONTROLS

AUDIO SYSTEM

(TOUCH-SCREEN RADIO SHOWN)

WINDOW SWITCHES

(REAR WINDOW SWITCHES ON BACK OF CENTER CONSOLE)

LOWER SWITCH PANEL

Electronic Stability Program

Sway Bar Disconnect

Axle Lock

Power Outlet

Hazard Switch





KEY FOB:

LOCKING AND UNLOCKING THE DOORS/SWING GATE

- Press the LOCK button once to lock all doors and swing gate.
- Press the UNLOCK button once to unlock the driver's door only and twice to unlock all the doors and swing gate.
- All doors can be programmed to unlock on the first press of the UNLOCK button.
- Refer to the Owner's Manual for programming.

REMOTE START

- Press the REMOTE START button **(x2)** twice within five seconds. Pressing the REMOTE START button a third time shuts the engine off.
- To drive the vehicle, press the UNLOCK button, insert the key in the ignition and turn to the ON/RUN position.
- With remote start, the engine will only run for 15 minutes (timeout) unless the ignition key is placed in the ON/RUN position.
- The vehicle must be started with the key after two consecutive timeouts.

PANIC ALARM

- Press the PANIC button once to turn the panic alarm on.
- Wait approximately three seconds and press the button a second time to turn the panic alarm off.



TURN SIGNAL/LIGHTS LEVER:

HEADLIGHTS/PARKING LIGHTS

- Rotate the end of the lever to the first detent for parking lights and to the second detent for headlights.

INSTRUMENT PANEL DIMMER

- Rotate the dimmer control to the extreme bottom position to fully dim the instrument panel lights and prevent the interior lights from illuminating when a door is opened.
- Rotate the center portion of the lever up to increase the brightness of the instrument panel lights when the parking lights or headlights are on.
- Rotate the center portion upward to the next detent position to brighten the odometer and radio controls when the parking lights or headlights are on.
- Rotate the center portion upward to the last detent to turn on the interior lighting.

HIGH BEAM OPERATION

- Push the lever forward to activate the high beams.

FOG LIGHTS

- Turn on the parking lights or low beam headlights and pull out the end of the lever.

TURN SIGNALS/LANE CHANGE ASSIST

- Tap the lever up or down once and the turn signal (right or left) will flash three times and automatically turn off.

VEHICLE



SPEED CONTROL LEVER:

CRUISE ON/OFF

- Press the ON/OFF button to activate the Speed Control.
- CRUISE will appear on the instrument cluster to indicate the Speed Control is on.
- Press the ON/OFF button a second time to turn the system off.

SET

- With Speed Control on, press down and release the lever to set a desired speed.

ACCEL/DECEL

- Press and hold the lever up to accelerate or down to decelerate the vehicle; release the lever to save the new set speed.
- Once a speed is set, tapping the lever up or down will increase or decrease the set speed approximately 1 mph (2 km/h).

CANCEL

- Pull the lever toward you, push the clutch pedal, or apply the brakes to cancel the set speed and maintain the set speed memory.
- Press the ON/OFF button to turn the system off and erase the set speed memory.

RESUME

- To resume a previously selected speed in memory, press the lever up and release.

FEATURES

Rear Wiper/Washer Front Wipers



Front Wiper
(pull toward
driver)

Mist (down)

WIPER/WASHER LEVER:

FRONT WIPERS

Intermittent, Low and High Operation

- Rotate the end of the lever to the first detent position for one of five intermittent settings, the second detent for low wiper operation and the third detent for high wiper operation.

Washer Operation

- Pull the lever toward you and hold for as long as spray is desired.

Mist

- Pull down on the lever and release when a single wipe is desired.

REAR WIPER

Wiper Operation

- Rotate the center portion of the lever forward to the first detent for rear wiper operation.

Washer Operation

- Rotate the center portion of the lever past the first detent to activate the rear washer.

MOPAR ACCESSORIES:

The following highlights just some of the Authentic Jeep Accessories by Mopar that are available for your Jeep Wrangler.

CHROME:

- Grille
- Tubular Bumper
- Tubular Side Steps
- Mirror Caps
- Fuel Door
- Tail Lamp Guards

OFF-ROAD:

- Bumper
- Rock Rails
- Skid Plates
- Winches
- Bead Lock Wheels

EXTERIOR:

- Black Tubular Side Steps
- Black Tubular Bumpers
- Cab Covers
- Spare Tire Cover
- Hard Tops
- Soft Tops

ELECTRONICS:

- uconnect™ web (WiFi)
- SIRIUS Satellite Radio
- Ambient Footwell Lighting
- Heated Seats
- iPod® Adapter
- Fog Lights

To see the full line of accessories, stop by your Jeep dealer or visit mopar.com.

This guide has been prepared to help you get quickly acquainted with your new Jeep and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation Radio User Manual, Multimedia User Manual and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit mopar.com or your local Jeep dealer.



81-316-0970

Wrangler
Second Printing
Quick Reference Guide

www.JEEP.com

Have fun out there. **Jeep**